

Microwave Will Not Start

1. Confirm that the microwave door is fully closed.
2. Ensure the microwave is securely plugged into a working outlet.
3. Check your circuit breaker to see if it has tripped.
4. Reset the GFCI outlet in case it has tripped.
5. If the issue continues, please submit a maintenance request.

Microwave Light Is Not Working

1. Verify the microwave is properly plugged in.
2. Check your circuit breaker for any tripped switches.
3. If the light still does not work, submit a maintenance request.

Proper Use of Your Microwave


- Heat and cook food safely.
- Provide ventilation for your stovetop while cooking.
- Always use microwave-safe containers and follow manufacturer guidelines for safe operation.

Microwave Cleaning and Odor Prevention

- Clean the two filters located at the bottom of your microwave monthly (or as needed) using warm soapy water. These trap grease and help prevent flames that may cause a fire.
- Use mild detergent (soapy water) mixed with water to clean inside of the microwave. A tablespoon of baking soda mixed with 1 liter of water can be used as a cleaning agent.

DO NOTS:

- Place any metal in the microwave. This includes aluminum foil, twist ties, ect.
- Operate without the turntable or turntable support.
- Do not use abrasive powder or sprays, window sprays, citrus or plant-based cleaners, any cleaner with a warning about plastic content.

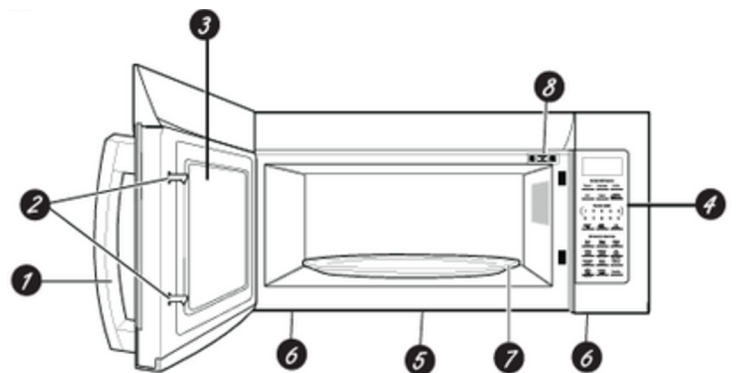

1. Door Handle
2. Door Latch
3. Window with Metal Shield
4. Touch Control Panel
5. Cooktop Light
6. Grease Filter
7. Removable Turntable (must be in place when using oven)
8. Rating Plate